

TOP EXCITE® LIVE

User Manual



Contents

Contents	2	Moving the product.....	17
Important safety instructions	3	Levelling the product	18
Personal safety	4	Electrical connection	19
Manufacturer and product identification.....	5	Other connections	21
Product description	6	Routine maintenance	22
Using the product.....	9	Periodic maintenance	23
Using the heart rate monitor	13	Troubleshooting	25
Technical specifications.....	14	Technical Support Service	26
Turning the product ON and OFF.....	15	Storing the product.....	27
Place of usage.....	16	Disposing of the product	27

Important safety instructions

You should always consult a qualified and licensed medical professional or healthcare practitioner before starting any nutritional, diet, stretching or exercise program. You are advised to investigate and inform yourself about any health related actions and choices you make.

Please read all instructions before using the product. These instructions were written to ensure the safety of the user and to protect the product.

When using an electrical appliance, basic precautions should be always followed, including those listed below.



DANGER

To reduce the risk of electric shock, always remove the plug from the electrical socket immediately after use and before cleaning or performing any maintenance procedures.



WARNING

To reduce the risk of burns, fire, electric shock or injury to persons, take the following precautions.

Never leave the product plugged in and unattended. Unplug the product from the electrical socket when not in use, before cleaning it, and before installing or removing electrical parts.

Do not allow children to have unsupervised access to the product.

Close supervision by qualified personnel is necessary when the product is being used by or near children, invalids or disabled persons.

Use the product exclusively for the purposes described in the user manual; only perform the exercises for which the product has been designed, following the instructions provided in the manual. Any other use is to be considered inappropriate and therefore dangerous.

Do not use any accessories other than those recommended by Technogym.

Never turn on the product if it has a damaged cable or plug, if it is not working correctly, if it has been knocked over or damaged, or if it has fallen in water. In these circumstances, contact the Technogym Technical Support Service.

Do not pull the product by the power cable or use the cable as a handle.

Keep the power cable away from heated surfaces.

Keep your hands away from moving parts.

Never drop or insert any object into any opening.

To disconnect the power, bring all controls in the off position and then remove the plug from the socket.

SAVE THESE INSTRUCTIONS

Personal safety

Use of the product is subject to a medical examination to assess your suitability for the type of workout exercise you intend to perform, and in compliance with the conditions for use laid down by Technogym.

Persons suffering from certain physical conditions may only use the product under the strict supervision of a doctor with specific qualifications.

Before starting an exercise, make sure your position on the product is correct, paying attention to any components that may obstruct use.

Plan the workout according to your physical characteristics and state of health, beginning with less demanding workloads.

Do not overexert yourself or work to exhaustion. Incorrect or excessive exercise may cause serious physical harm or death. If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.

Wear suitable workout clothing and shoes during training; do not wear garments that block perspiration; do not wear loose clothing. Tie long hair back. Keep garments or towels away from moving parts.

When using the product, other people must remain at a safe distance.

Do not use the product when children or pets are present.

The person in charge of the gym must explain proper and improper use of the product to users.

Fully assemble the product before use. Check the product before each use. Do not continue to use the product if it is not working properly.

Assemble and use the product only on a solid and flat surface.

Keep all of the components, such as the power cable and I/O switch, away from liquids in order to prevent electric shocks.

Keep the product in good working condition. If you see signs of wear, contact the Technogym Technical Support Service.

Do not attempt any maintenance work on the product other than the operations described in the user manual.

The installation, maintenance and setting operations must be carried out by qualified Technogym staff or persons authorised by Technogym.

The electrical system must conform to the standards and legal requirements in the country of use.

Do not put anything on the frame or display.

Please read the adhesive labels on the product, which provide information about possible risks and hazards.

Technogym is not responsible for any harm due to any failures or damage caused by unauthorised maintenance, misuse, accident, negligence, improper assembly or installation, debris resulting from any construction activities in the area where the product is used, rust or corrosion as a result of the product's location, alterations, or modifications without Technogym's written authorisation or caused by failure on your part to use, operate and maintain the product as set out in this User Manual.




WARNING


High voltage inside the product. Guard to be removed by authorised personnel only.

Manufacturer and product identification

16" DISPLAY

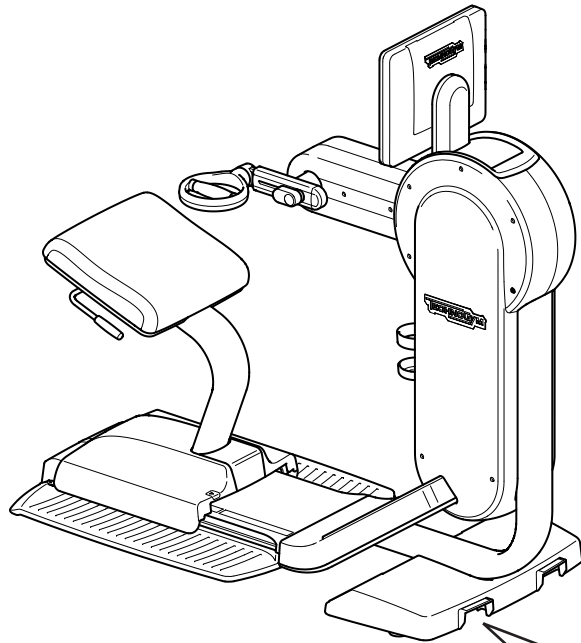


10" DISPLAY

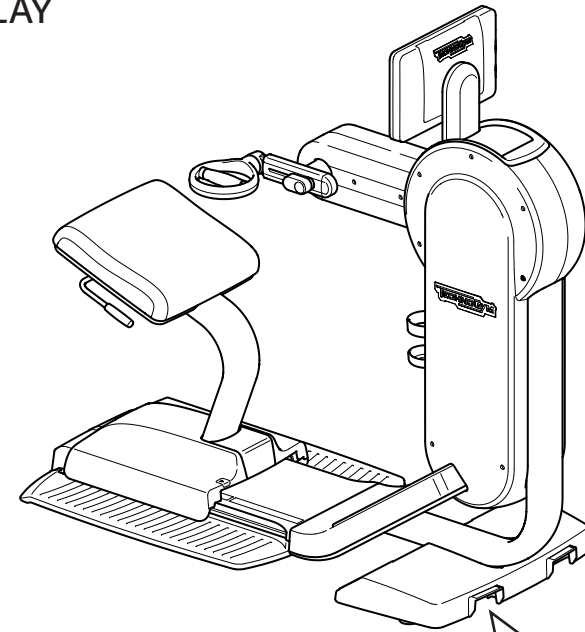

The values stated in the illustration are purely indicative; refer to the label attached to the product for the correct information.

- A** - Manufacturer's name and address
- B** - Place of manufacture
- C** - Description of product
- D** - Electrical specifications
- E** - Refer to the User Manual
- F** - Serial number and date of manufacture
- G** - Product model

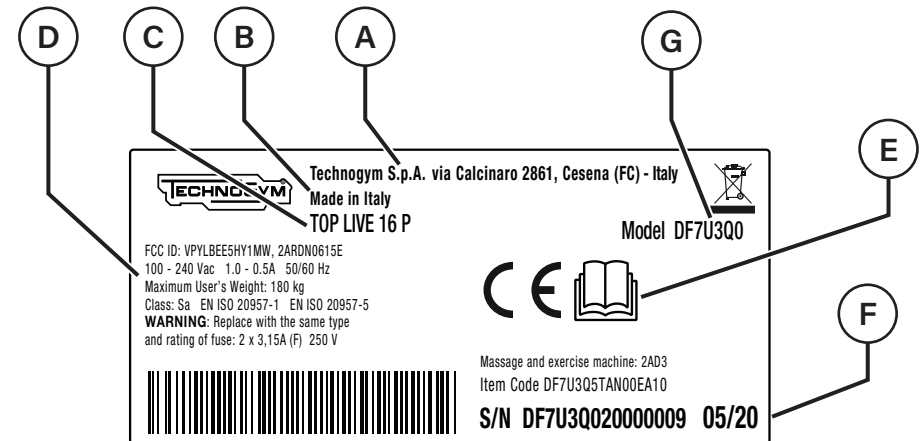

Product description

Display (A). Enables you to view and manage workout and entertainment information, settings and content. The touch-screen interface lets you include content offered by the Technogym App Store.

Exercise levers (B).

Handgrips (C).

Water bottle holder (D).

Front footrests (E).

Rear footrests (F). Step onto the rear footrests to perform the exercise while standing. These footrests are used to secure a wheelchair in place.

Seat (G). Secure it to the rear footrests. The seat is optional.



Phone support (H).


Headphone plug (L). To connect your headphones and listen to audio content. Headphones with microphone can also be used.

USB port (M).

Technogym key slot (N). The device reads workout data from the Technogym key and saves the results of the current exercise.

NFC sensor / RFID reader (P).

Product model	9000	5000
ANT+ receiver	YES	—
Bluetooth® 5.0	YES	—
Ethernet	YES	YES
Technogym key slot	YES	—
NFC sensor	YES	—

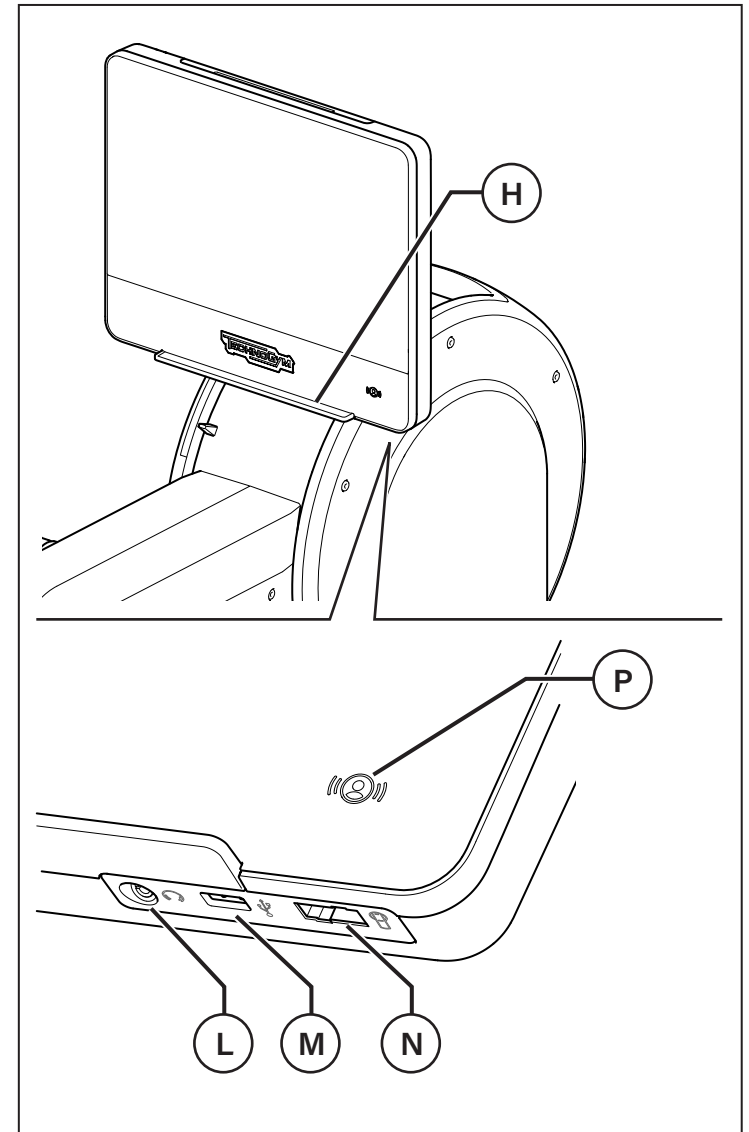

Phone support (H).


Headphone plug (L). To connect your headphones and listen to audio content. Headphones with microphone can also be used.

USB port (M).

Technogym key slot (N). The device reads workout data from the Technogym key and saves the results of the current exercise.

NFC sensor / RFID reader (P).

Product model	900	500
ANT+ receiver	YES	—
Bluetooth® 5.0	YES	—
Ethernet	—	—
Technogym key slot	YES	—
NFC sensor	YES	—

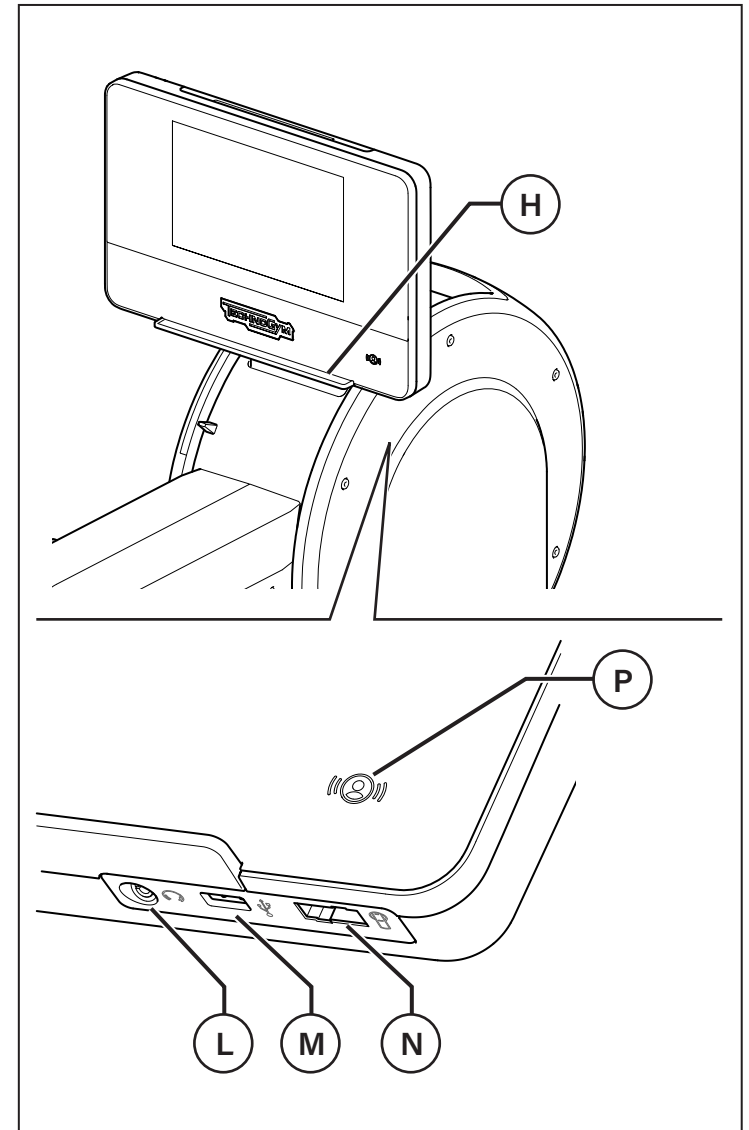




Using the product

The exercise can be performed while standing on the rear footrests or from a seated position, with feet resting on one of the front footrests.

Disabled persons can slide the seat out and bring their wheelchair onto the rear footrests.


The levers enable you to do an alternating arm cycle.

Top must only be used for the purpose for which it was designed and made: exercising shoulders and arms. Any other use is to be considered inappropriate and therefore dangerous.

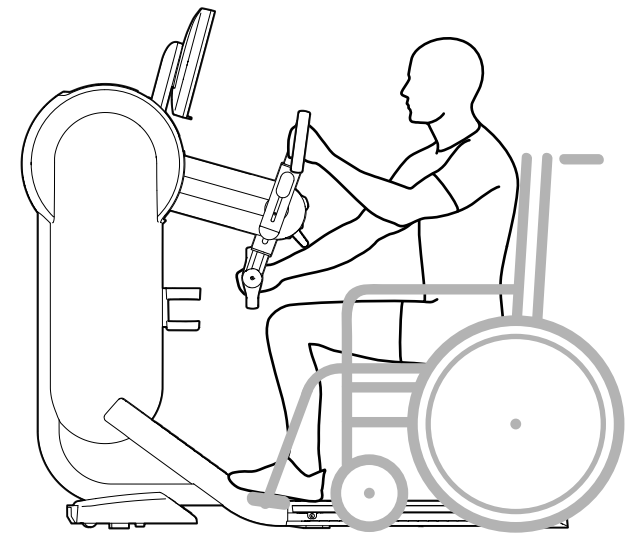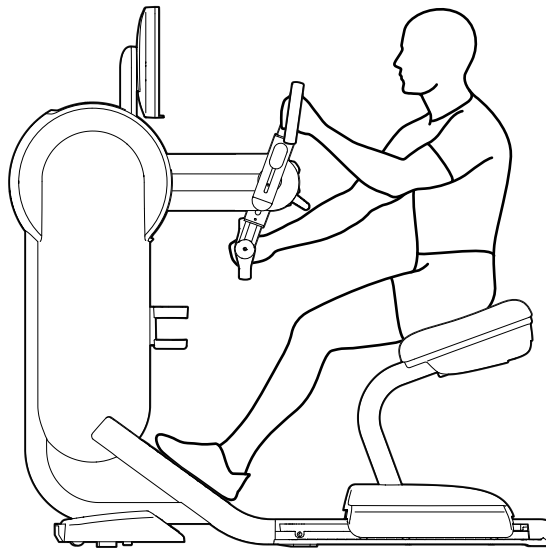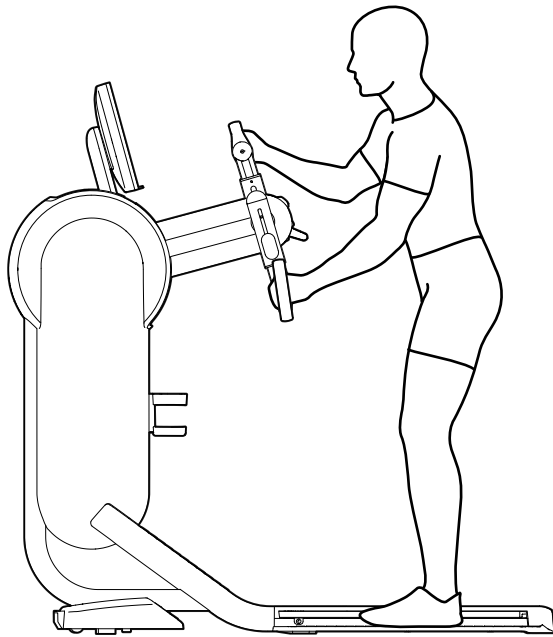


The length of the exercise levers is adjustable.

- Rotate the knob upwards (**Q**).
- Adjust the length of the lever.
- Rotate the knob downwards (**Q**) to lock the position of the lever.

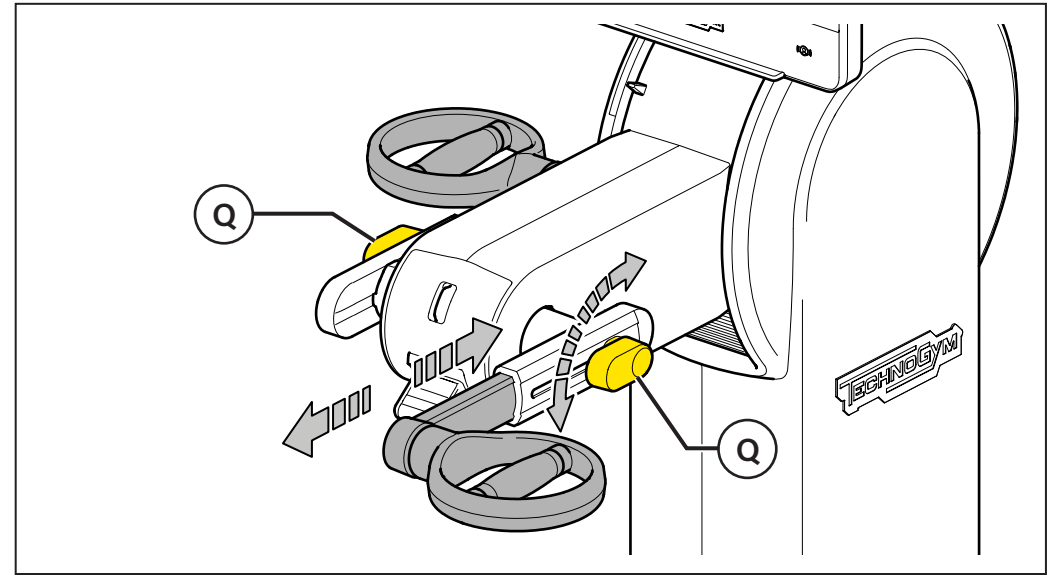


To adjust the height of the exercise levers, use the locking piece (**S**) to raise or lower the unit (**R**).

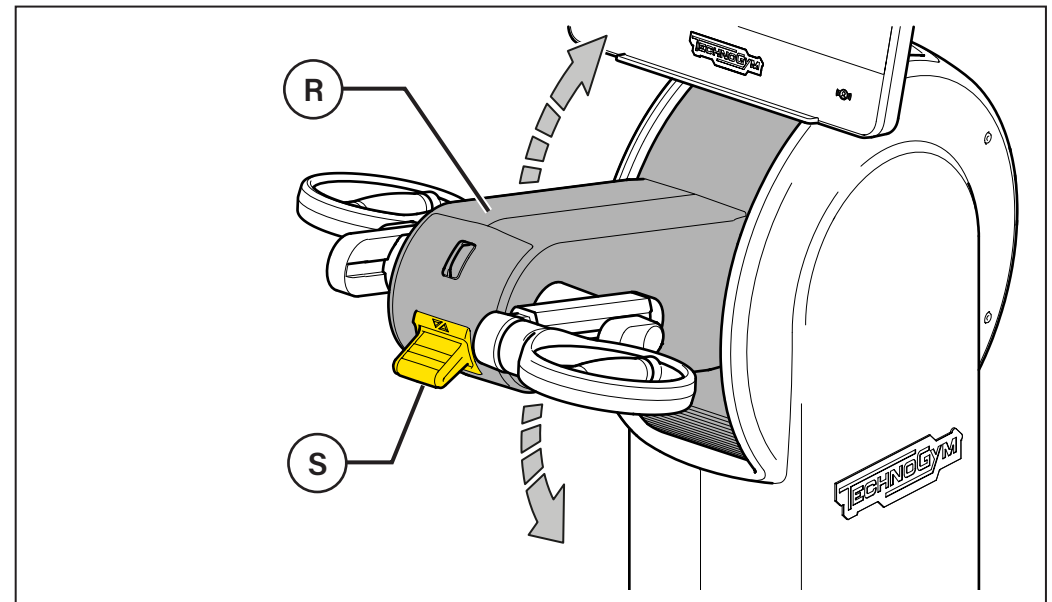

To insert the seat, pull the lever (**T**) and slide the seat until reaching the desired position. Release the lever (**T**) to lock the seat into place.

To remove the seat, pull the lever (**T**) and move the seat backwards until it is completely out of its housing. This will make it possible to perform the exercise from a standing position or from a wheelchair.

The seat locks into 9 positions as marked on the adhesive label.

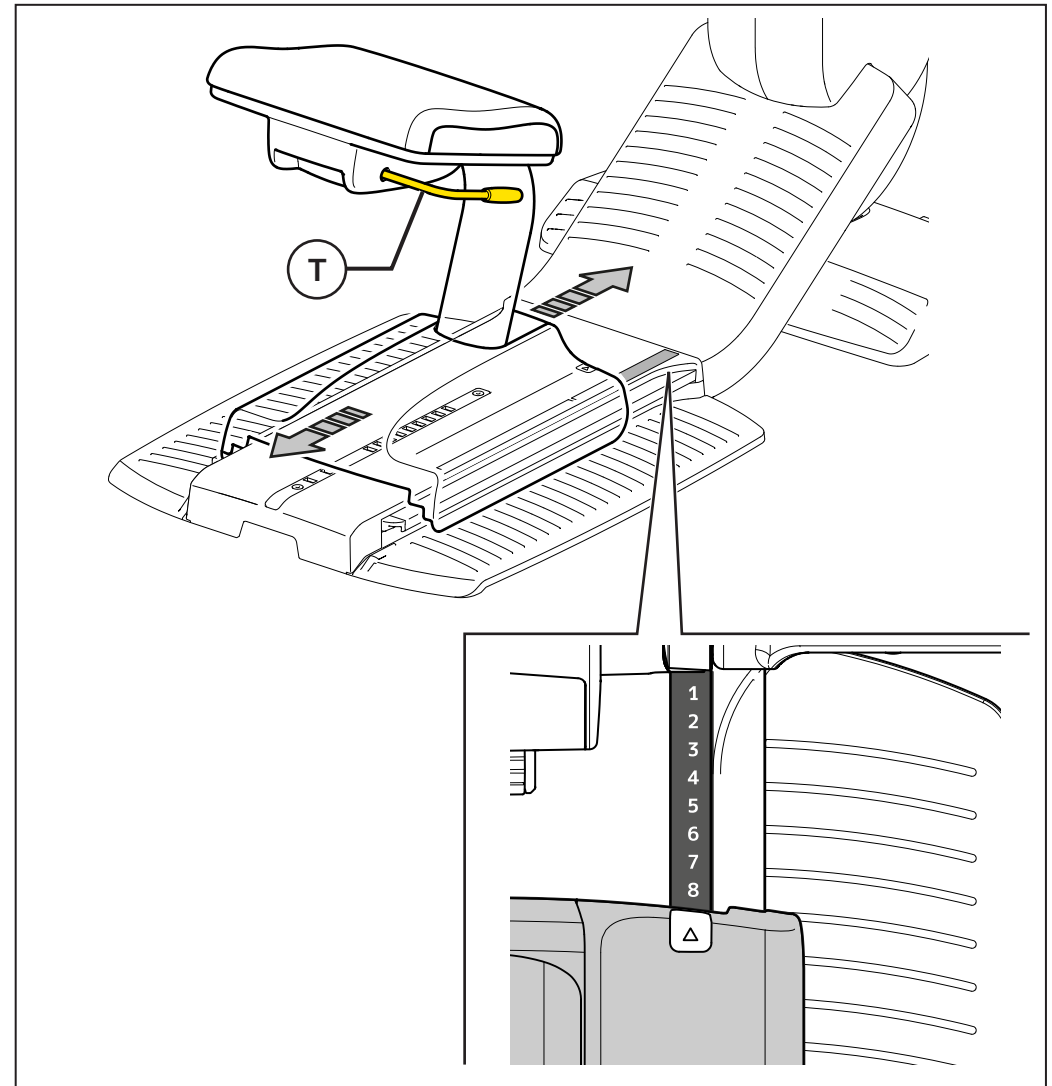



Do not sit down if the red area or tipping hazard symbol is visible; this means the seat is not locked into place. The adhesive label (V) indicates when the seat is in a dangerous position.

Do not leave the seat simply resting on the footrest. Always lock the seat into one of the 9 positions.



WARNING

Before sitting down, make sure the seat is properly locked into place in its housing.

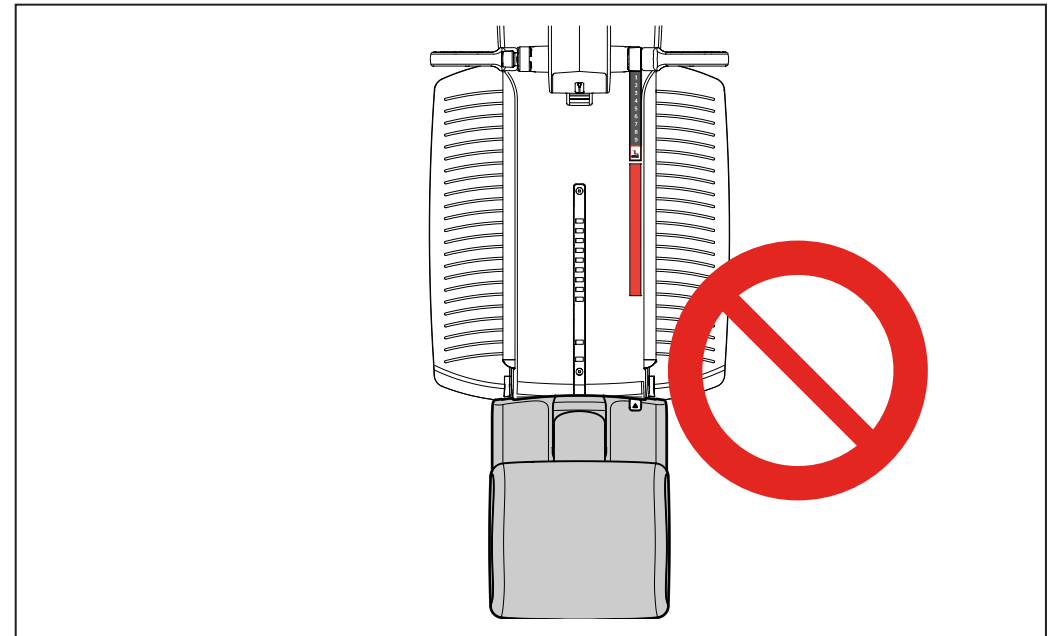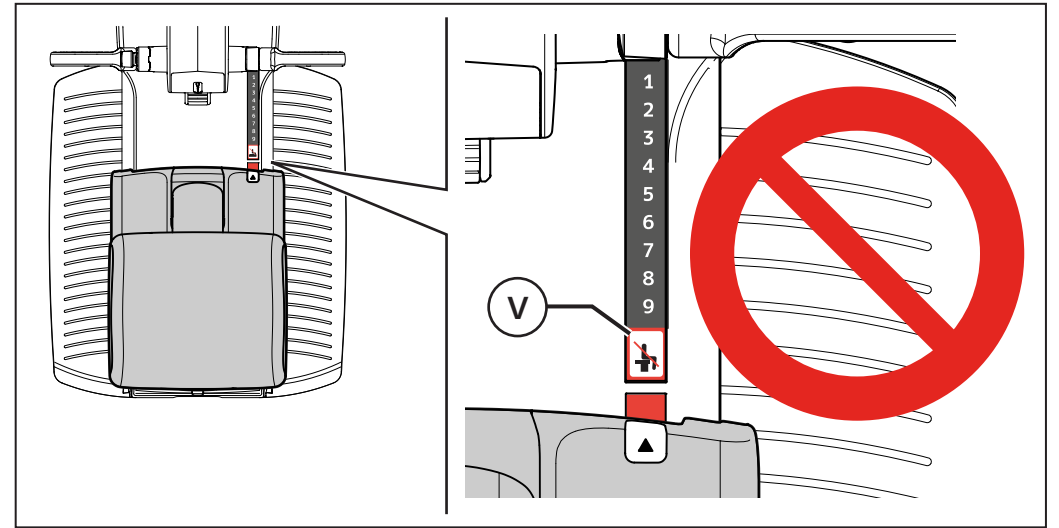

Using the heart rate monitor

The product can monitor the heart rate with devices fitted with heart rate transmitter.



WARNINGS

During a workout it is very important that your heart rate never goes above 90% of your maximum rate (unless you are an athlete engaged in competitive sport).

The sole function of the heart rate monitor is to display the heart rate during exercise and cannot be used for medical cardiac diagnoses of any kind. The heart rate shown on the display is purely indicative and cannot be considered absolutely certain.

Do not use the heart rate monitor if you have a cardiac support device such as a pacemaker or similar.



Diminish the intensity of your exercise if a message reporting that the heart rate is too high appears.

Technical specifications

Product model	9000, 5000	900, 500
Power supply	100-240 Vac 50/60 Hz	
Maximum input power	160 VA	
Fuses	2 x 3.15 A (F)	
Maximum capacity of water bottle holder	2 kg (4 lb)	
Weight of the product	138.5 kg (305 lbs)	136 kg (300 lbs)
Weight of the seat	25.8 kg (57 lbs)	
Maximum weight of user	180 kg (397 lbs)	
Protection rating	IP 20	

The braking system is adjustable; the power output depends on the level set and speed.

Top is a commercial device, designed for indoor use in residential and professional environments. It is classified as a class SA device according to ISO EN 20957-1.

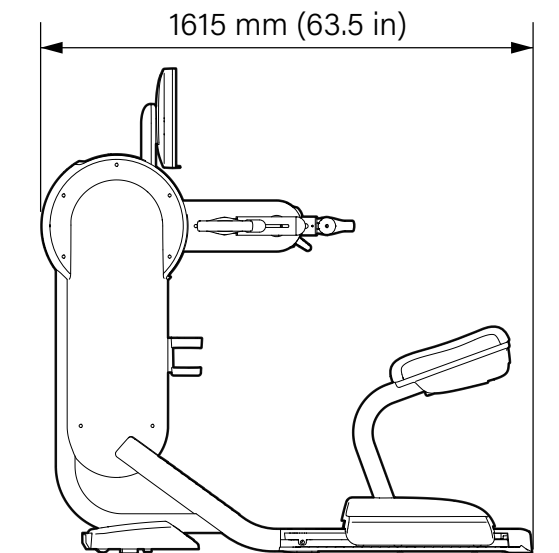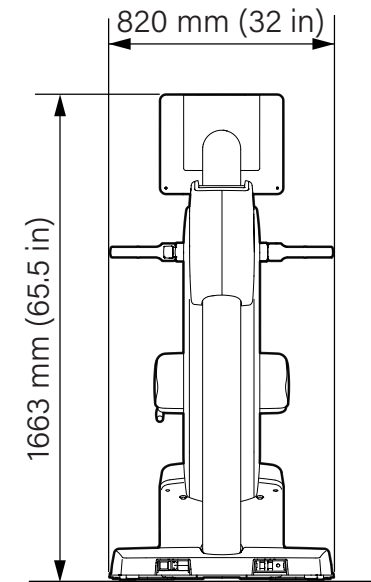

Turning the product ON and OFF

The main switch (Y) connects and disconnects the power to the product.

Turn on the product by pressing the main switch to the **I** position (ON).

Turn off the product by pressing the main switch to the **0** position (OFF).


Turn the product off, after exercising, only when it is in stand-by.

If you do not expect to use the product for some time, turn it off at the switch and take the power plug out of the wall socket.



WARNING


The switch turns the product ON/OFF but it does not isolate it from the mains voltage, even if it is in the “0” position (OFF). Take the power plug out of the socket to isolate the product.

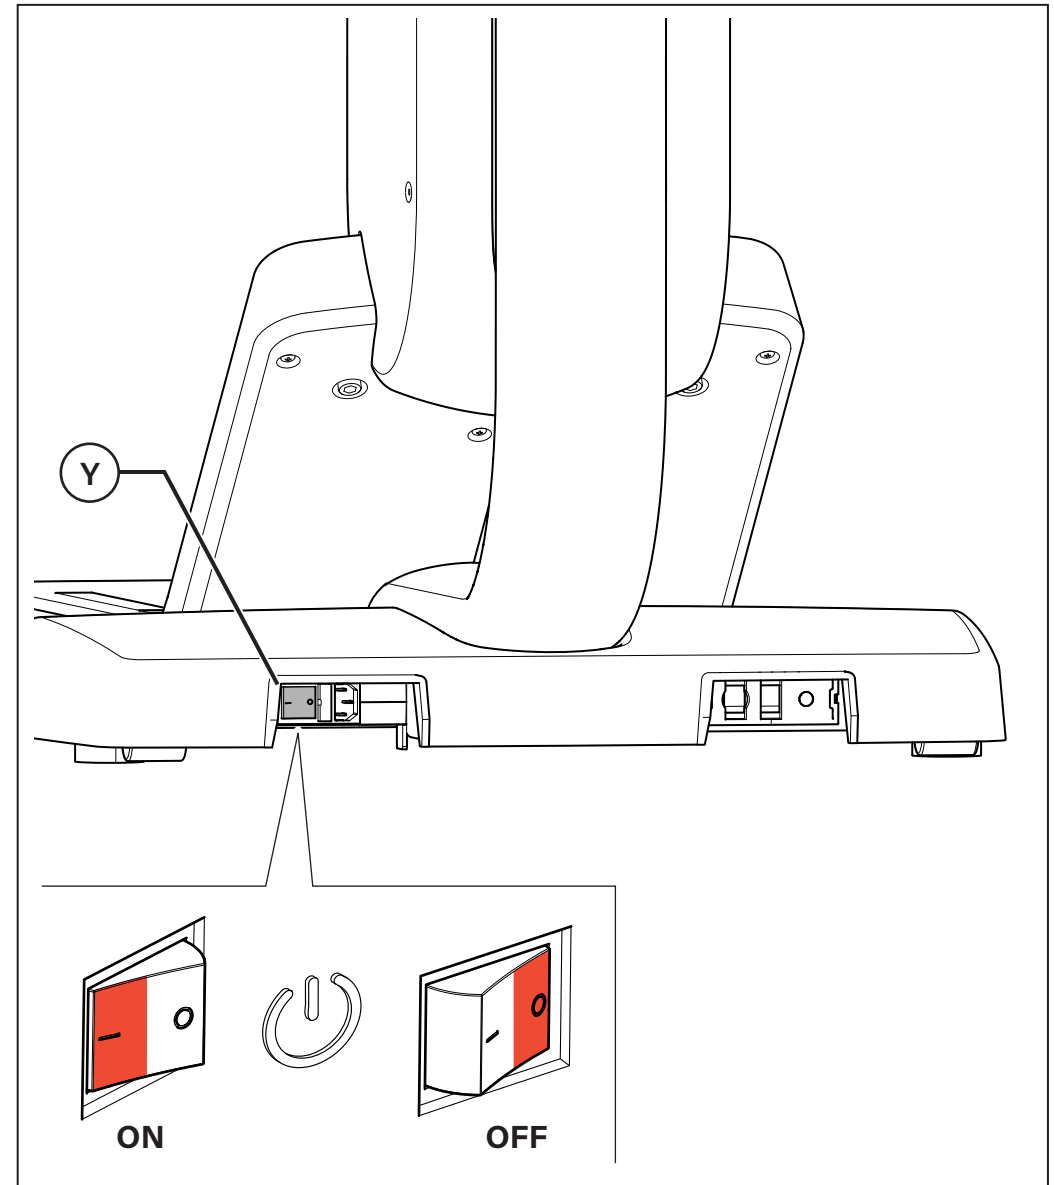

Place of usage

In order to ensure that activities with the product are easy and risk-free for people, the area in which they take place must meet a number of specific requirements. In particular, when deciding where to install the product, make sure that the location satisfies the following requirements.

- Temperature of between +10°C (50°F) and +25°C (77°F).
- Sufficient air circulation, with the capacity to keep humidity levels between 20% and 90% during exercise.
- Sufficient lighting, to make the area a safe and relaxing place to exercise in.
- Free space - at least 60 cm wide - around every product.
- A flat, stable and vibration-free surface that is capable of supporting the weight of both the product and the user.

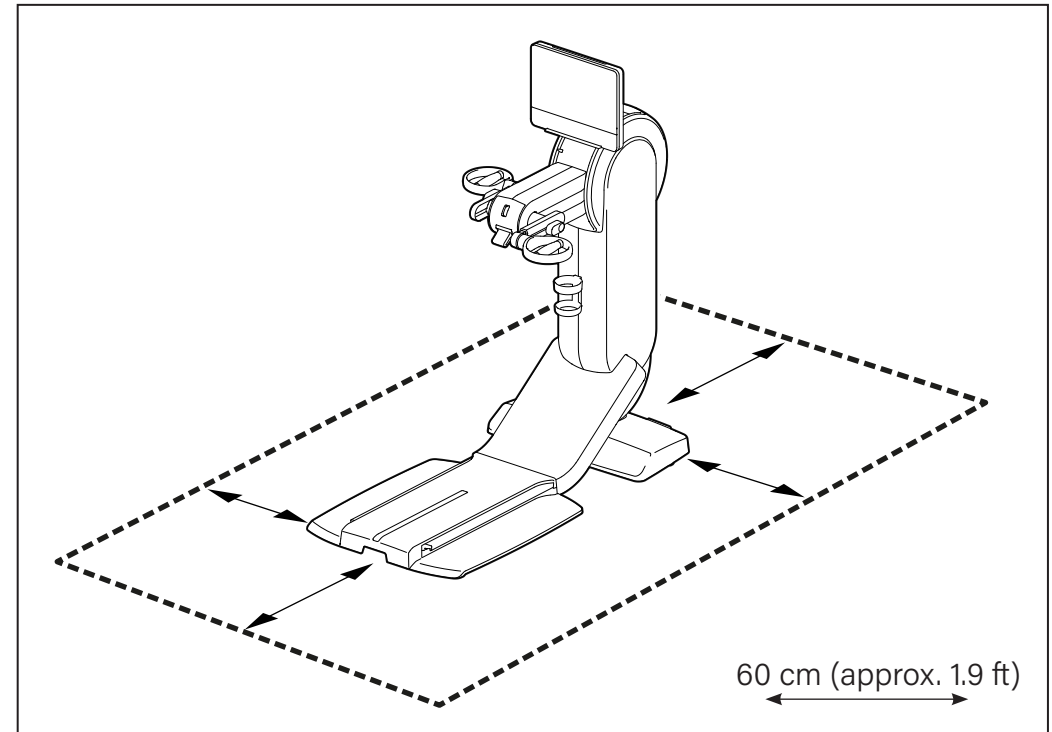

The location where the product will be used must meet the suitability requirements set forth in current applicable laws.

Do not expose the product to direct sunlight.

Do not place the product in humid environments, such as swimming pools, whirlpool baths, and saunas.

Do not use outdoors; do not leave the product outside, exposed to the weather elements; do not clean with jets of water.

Do not operate where spray products or oxygen are being used.

In order to guarantee the Manufacturer's performance specifications, do not use the product in areas where the presence of short waves or similar interference is high.

Moving the product

The product has fixed front wheels. To move it, lift it up slightly as shown in the illustration, then push it forwards or backwards

Considering the weight of the product, we recommend that it should always be handled by more than one person.

If the condition of the floor makes it impossible to use the wheels, move the product with normal lifting and transport methods.



After moving the product, always check it is level to ensure correct operation.



WARNINGS

Move the product very carefully, because it may become unstable and tip over.

Do not lift or move the product from the exercise levers or display.

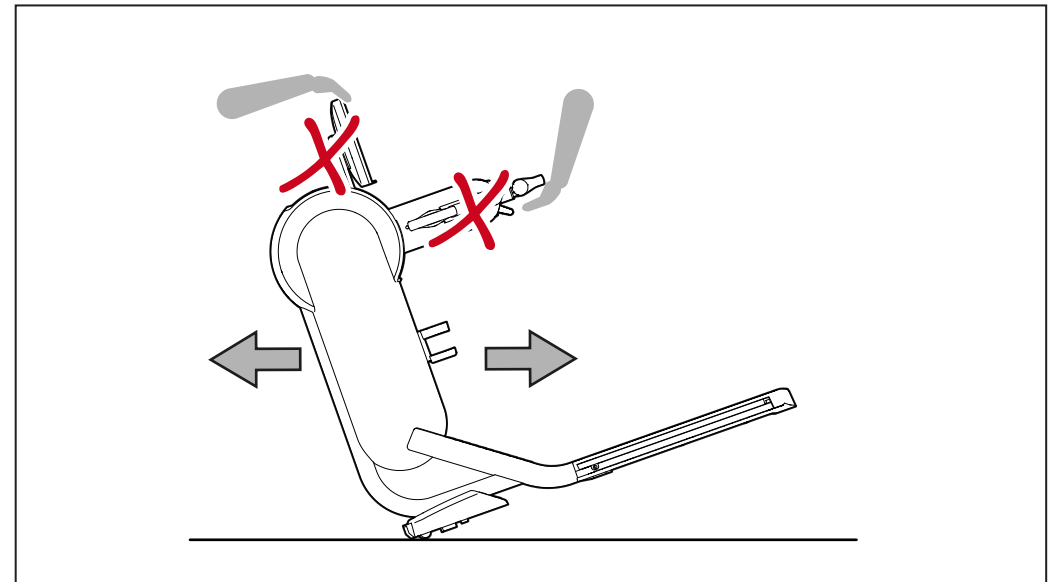
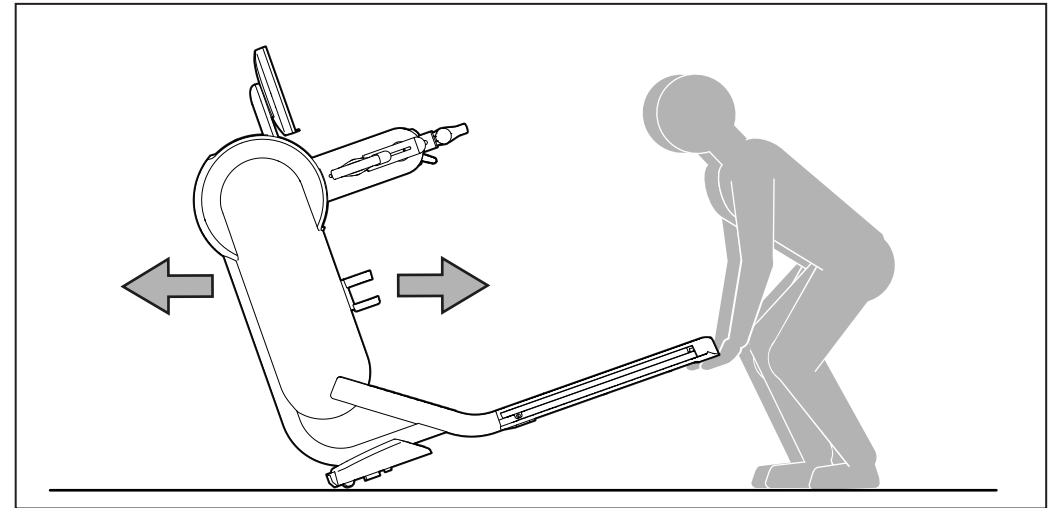


Levelling the product

The product must be level for proper operation.

Adjust the feet as shown in the illustration in order to level the product.

- Loosen the locknut (**B**).
- Screw or unscrew the foot (**A**) until the frame is in a stable position.
- After adjusting, tighten the lock nut (**B**).

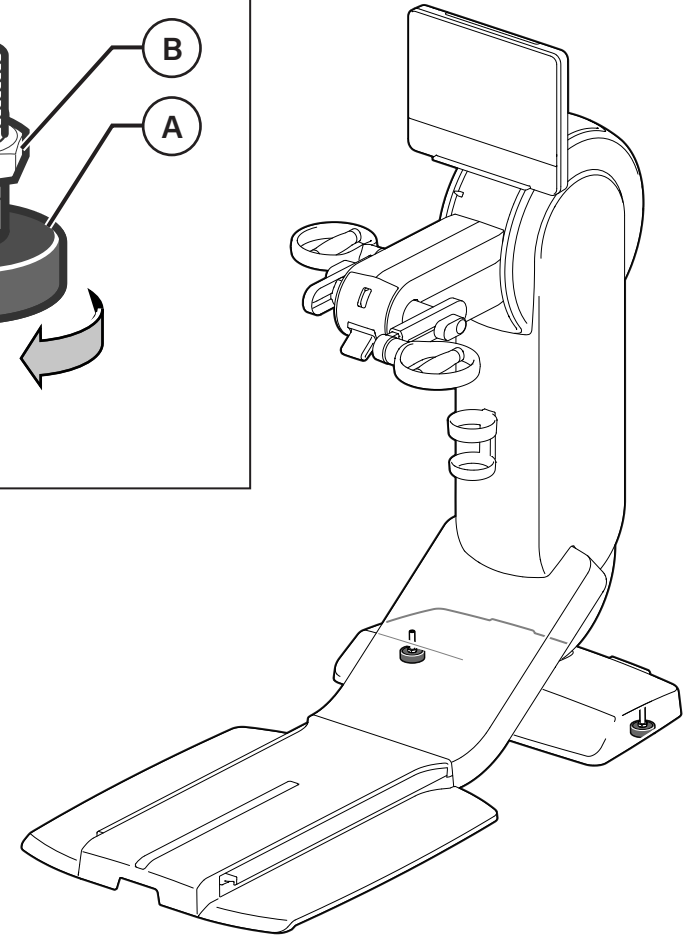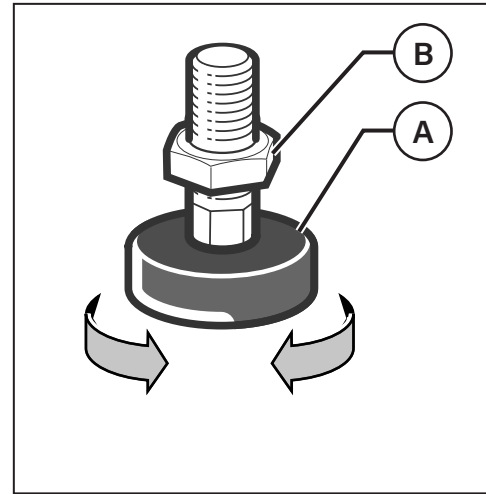

Electrical connection

Before connecting the product to the mains power supply, ensure that the electrical system specifications comply with current regulations. Check the mains power supply specifications on the identification label.

Plug the power cable into the product socket first and then into the wall socket.





WARNINGS

The wall socket must be located in a place where the product may be easily and safely plugged in and unplugged.

The power switch must be in the 0 position (OFF) before plugging in the product.

Check the state of the power cable periodically.

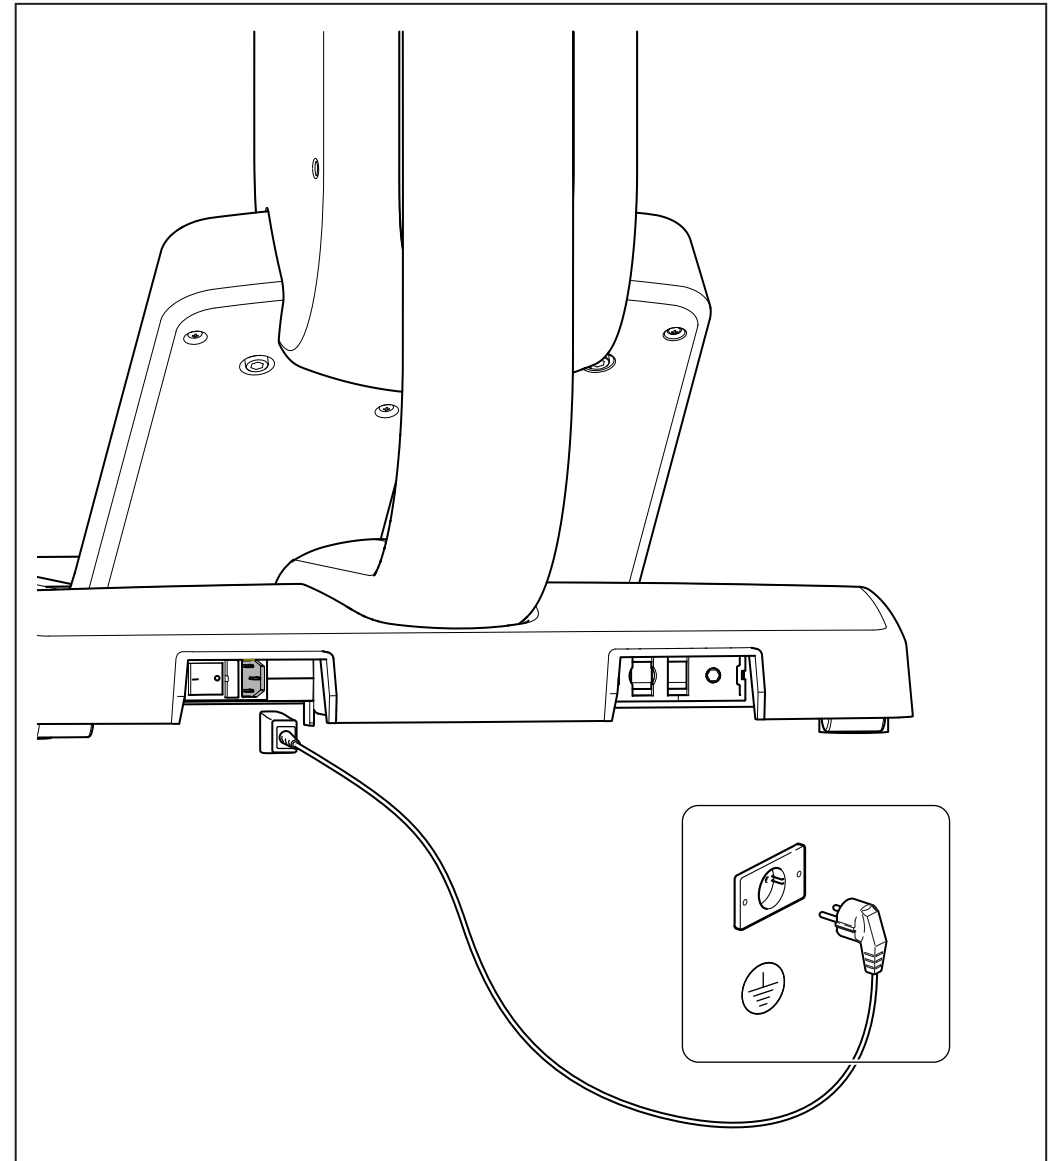

The power socket must be fitted with earth . If missing, it must be installed by an electrician before plugging in the product.

The product must be grounded. In the event of faulty operation or failures, the earth wire provides the electrical current a low resistance path, reducing the risk of electric shocks. The product includes a cable with earthing conductor and plug. The plug must be inserted in a properly installed socket connected to the earth in accordance with local codes and regulations.



WARNINGS

Improper connection of the earthing conductor can result in the risk of an electric shock. Check with a qualified electrician or maintenance technician if you are in doubt whether the product is properly grounded. Do not modify the plug provided with the product; if it does not fit the socket, have a proper socket installed by a qualified electrician.

Other connections

A - Antenna cable jack

B - Ethernet jack

Use an RF coaxial cable to connect the antenna with an F-type connector for the product.


The wall socket for the antenna cable must be located in a position where the plug can be inserted and removed with ease.

Fasten the cables with cable ties.



WARNING

Connected devices must comply with international standards.

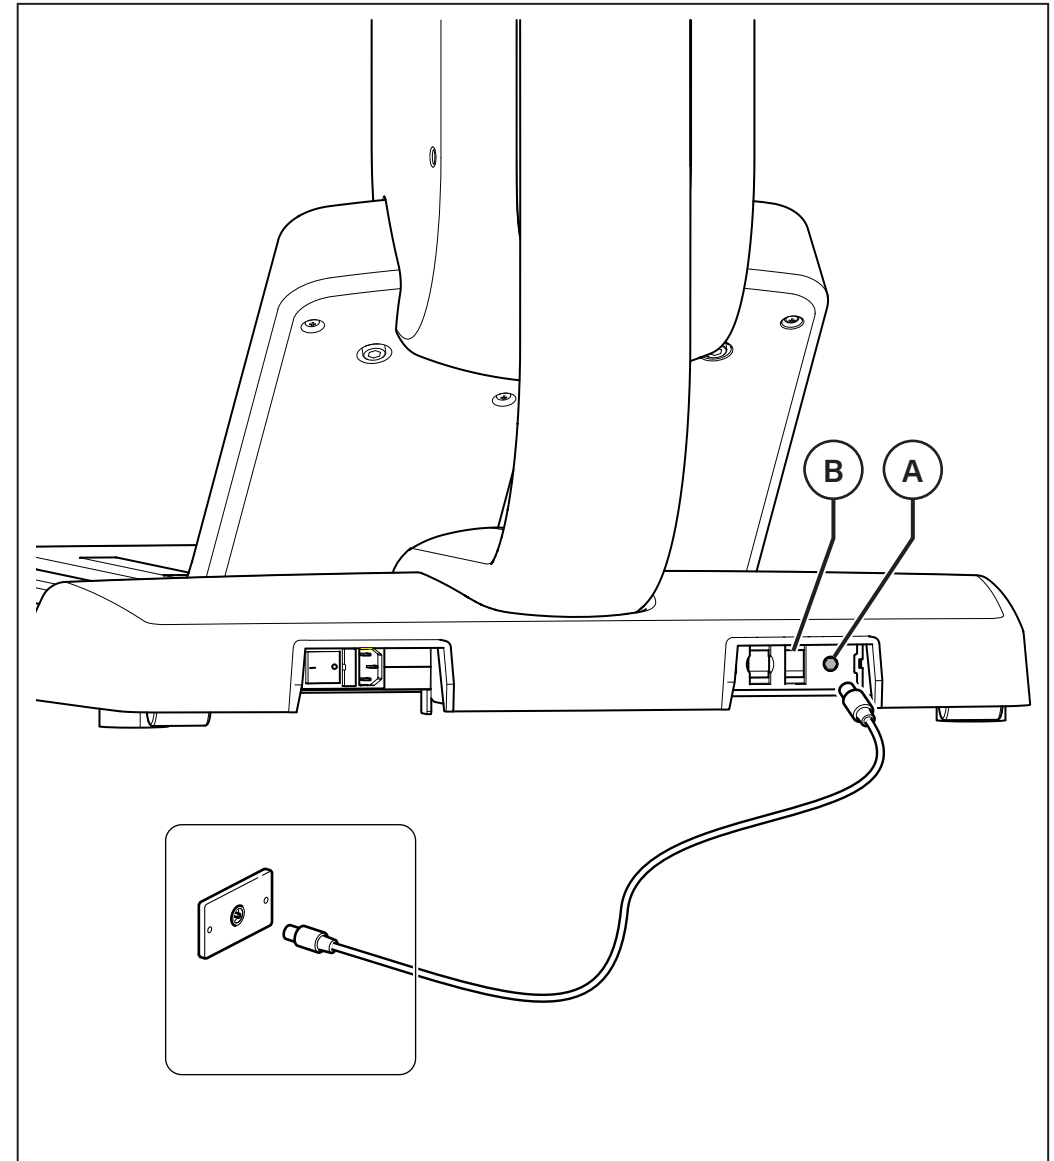

Routine maintenance



WARNINGS

The safety of the product is assured only on the condition that it is carefully inspected every two weeks for any signs of damage and/or wear. Replace defective or worn components immediately, or remove the product from service.

Contact the Technogym Technical Support Service for information about any maintenance operations not described in this manual.

Cleaning

The product should always be kept clean and free of dust, in compliance with common health and hygiene standards.

To clean the display, proceed as follows:


- Turn off the product by pressing the main switch to the "0" position.
- Take the product's power plug out of the wall socket.
- Clean the display using a damp (not wet) cloth.

Clean the entire product once a week.

- Turn off the product by moving the switch to the "0" position.
- Take the product's power plug out of the wall socket.
- Clean outer parts with a damp sponge.

Do not use chemical products or solvents.

Take care not to wipe the display and labels too aggressively.

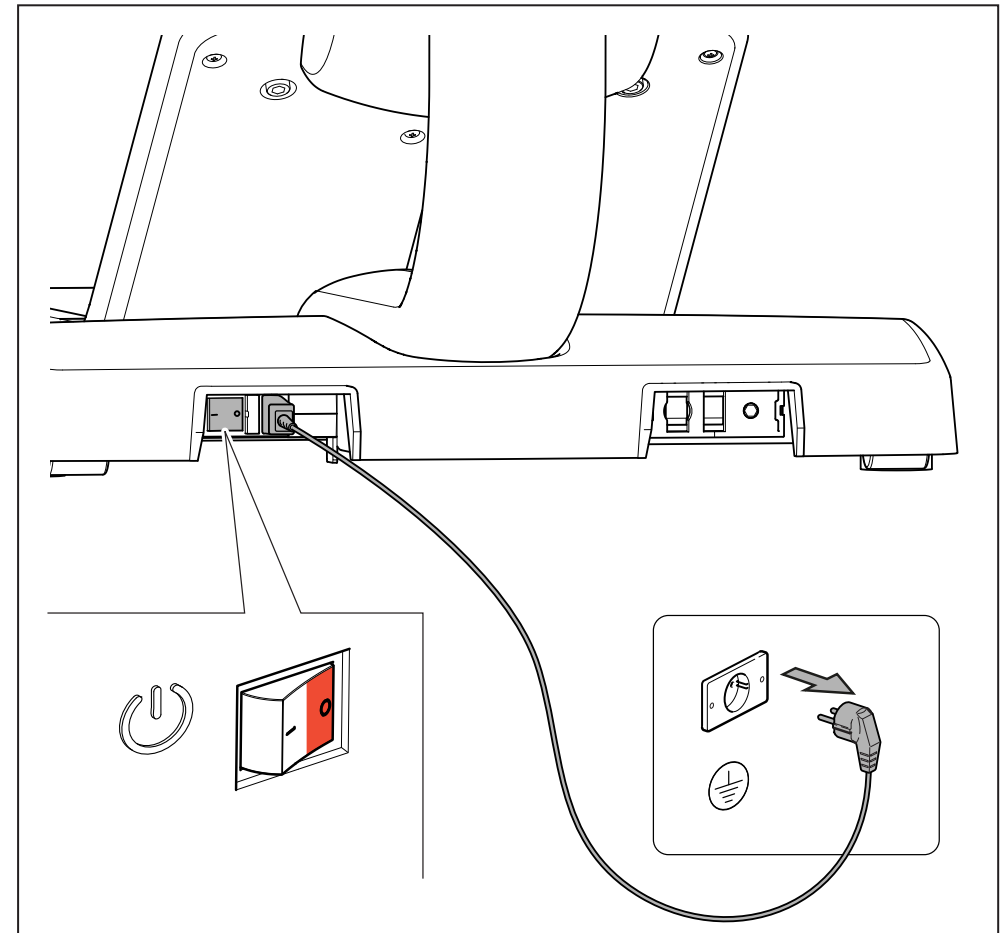

Periodic maintenance




WARNINGS

Periodic maintenance, adjustment and lubrication operations must be performed by the Technogym Technical Support Service.

Before servicing, turn off the product by moving the switch to the 0 position and take the power plug out of the socket.

Adjusting the play of the levers

- Remove the cover (**A**).
- Adjust the screw with a key (**B**).
- Put the cover (**A**) back in place once finished with the adjustment.

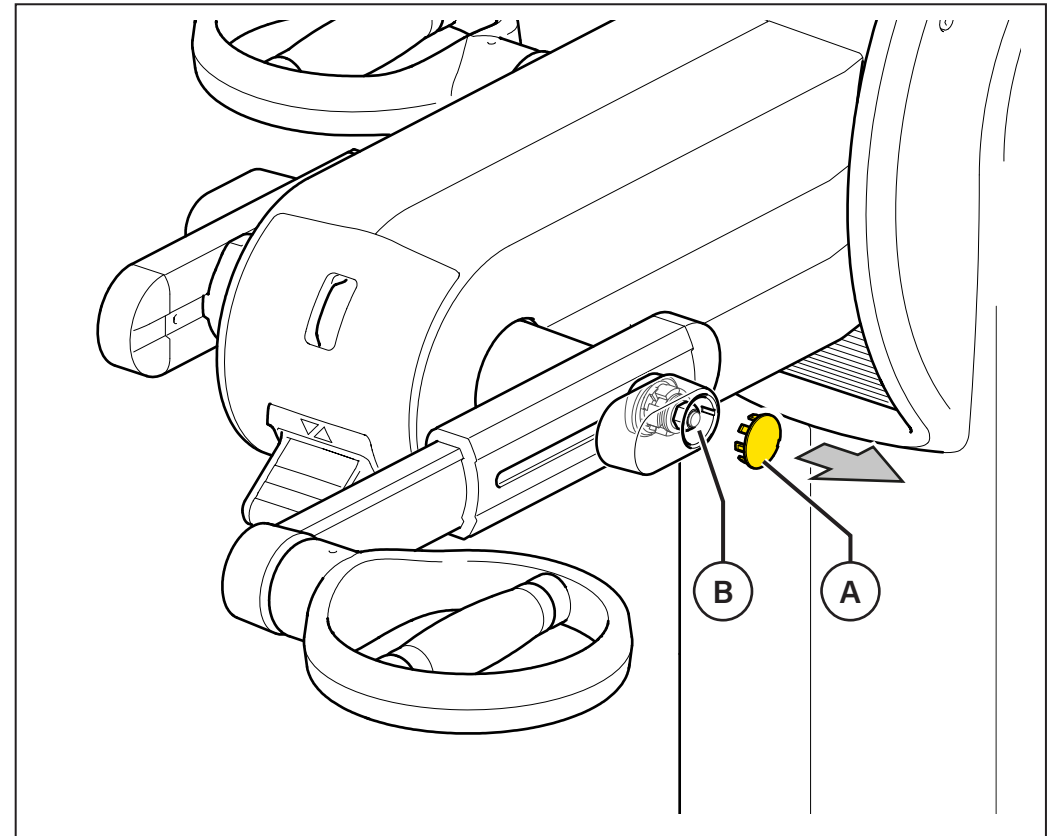

Replacing fuses

Fuses protect the product's electrical parts. When current is excessive, these fuse, preventing damage to the internal electronics.



WARNINGS

Fuses must be replaced by the Technogym Technical Support Service.


Before making the replacement, turn off the product by moving the switch to the 0 position and take the power plug out of the wall socket.

If the original fuses provided are not available, replace with new certified fuses having the same electrical specifications and of the same exact value: 3.15 A (F).

Press the lever to remove the fuse holder (**R**).

Replace the blown fuse with a new one, as supplied.

Put the fuse holder back in its housing making sure it clicks into place.

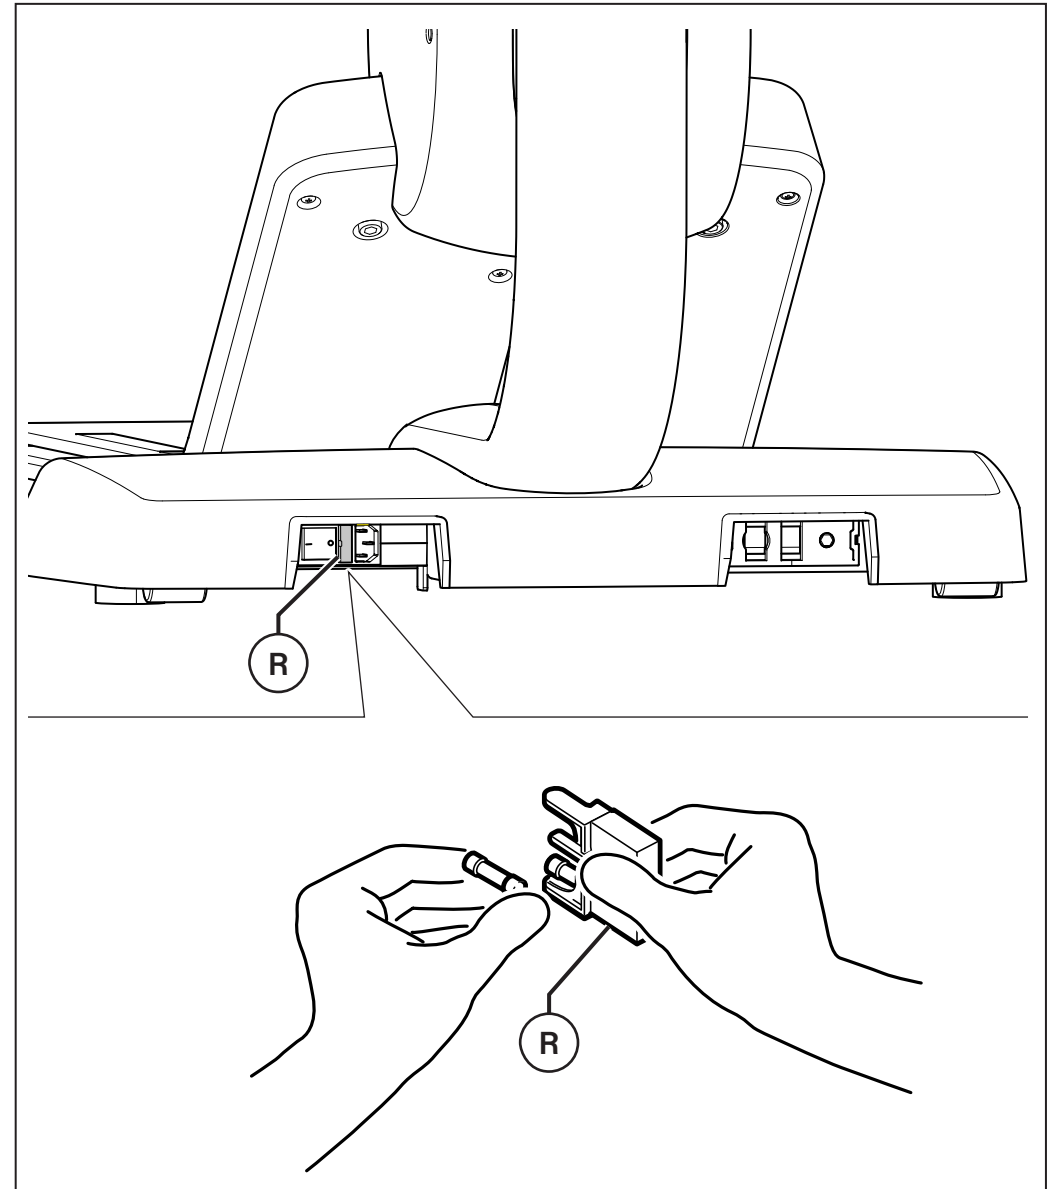

Troubleshooting

The following is a list of problems that may occur during normal use of the product. If the remedies described do not solve the problem, contact Technical Support for service.

Problem	Cause	Remedy
The product is not turning ON	No line voltage.	Check whether there is power at the socket by plugging in another product that you know works.
	The power supply cable is damaged.	Contact the Technogym Technical Support Service.
	The power supply cable is not plugged in properly.	Check the connection.
	Blown fuse	To replace a blown fuse, contact the Technogym Technical Support Service.
Excessive internal noise	The product is not level.	Check and level by using the levelling feet.
	Bearings are damaged.	Contact the Technogym Technical Support Service.
	The belt is worn.	Contact the Technogym Technical Support Service.

Technical Support Service

The Technogym Technical Support Service provides:


- telephone consultation
- information about which services are covered by the warranty and which must be paid for
- on-site servicing
- supply of original spare parts

When you contact the Technogym Technical Support Service, you must give the following information:

- Product model (**A**)
- Date of purchase
- Serial number (**B**)
- A precise description of the problem found.

Any work on the product by persons unauthorised by Technogym will invalidate the warranty.

Technogym supplies the electrical and wiring diagrams to companies with technical support.

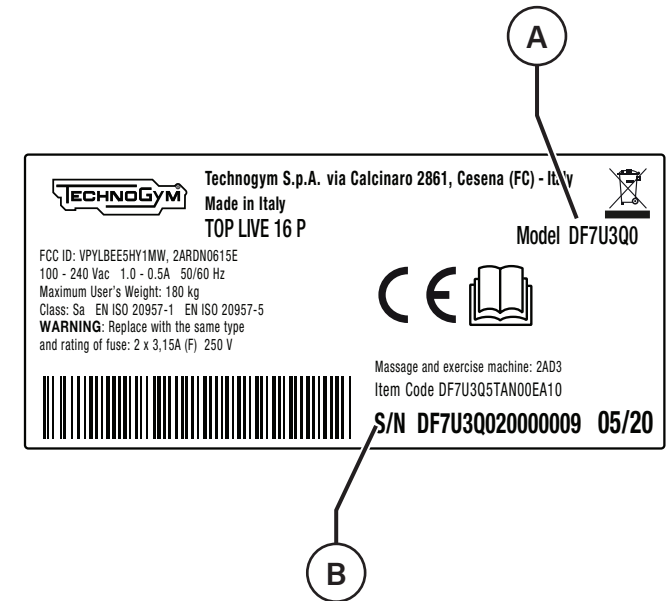

<https://www.technogym.com/int/contacts/>

Tel: +39 0547 56047

Storing the product

If you plan to leave the product inactive for an extended period of time, make sure it is stored as described below:

- In a clean dry place
- With a dust cover
- At a room temperature between -10°C (14°F) and 70°C (158°F) and relative humidity between 20% and 90%

Disposing of the product

Inspect the product and ensure it is not a potential source of danger. Do not allow children to have access to the product. When the product is not used for long periods, disconnect the power cable.

The product must not be disposed of in the environment, in public areas, or private areas used for public purposes.

The product is made from recyclable materials such as steel, aluminium and plastic, which must be disposed of by firms specialised in urban and environmental hygiene in the manner prescribed by the urban waste collection regulations in force.

Waste deriving from electrical and electronic equipment must not be disposed of as urban waste. A specific disposal system involving suitable processing, recovery and recycling in compliance with the regulations in force, is provided for this kind of waste.

Illegal dumping or improper use of electrical and electronic equipment waste may cause serious damage to the environment and have repercussions on people's health.

Under the provisions put into effect by the European Union Member States, private citizens resident within the European Union may take used electrical and electronic equipment to authorised collection centres.

If the product is used for commercial purposes, contact your reseller or the Technogym Customer Service, in the various Countries, to arrange for collection and disposal of waste from electrical and electronic equipment.

For disposal of electrical and electronic equipment in Countries outside the European Union, contact your local authorities.

Average life of the product: 10 years.

TOP_EXCITE_LIVE_en_AA
0SM01162

