
# UNITY SELF 2017

# Pre-installation requirements

Rev. 1.0 - (March 2017)

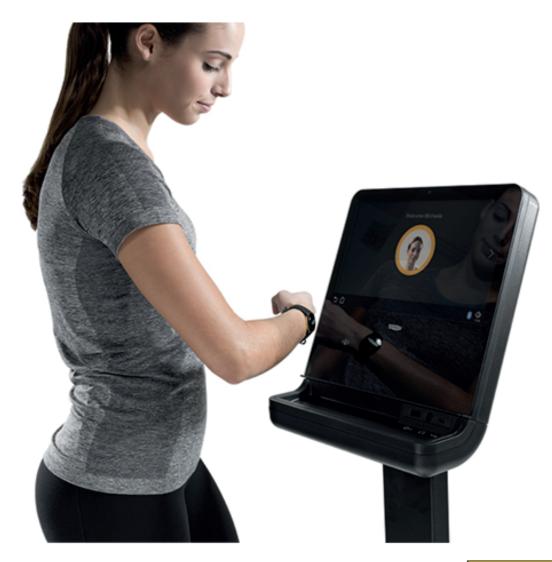





# Index

1.	GENERAL WARNINGS7
1.1	Introduction
2.	ELECTRIC REQUIREMENTS9
2.1	Power supply9
2•2	Power supply input and wall socket9
3.	REQUIREMENTS FOR THE DATA NETWORK CONNECTION11
3.1	Network requirements11
	3.1.1 Wired Ethernet network 11
	3.1.2 Wireless network 11
3.2	Wireless guidelines11
	$_{3,2,1}$ Maximum number of DEVICES CONNECTED to an access point $_{11}$
3.3	Firewall/router rules for accessing mw cloud services <sub>12</sub>
3.4	Proxy12
3.5	IP setting <sub>12</sub>
4.	MINIMUM HDMI CONNECTION REQUIREMENTS BETWEEN UNITY SELF AND AN EXTERNAL MONITOR / VIDEO PROJECTOR13
5.	RESOLUTION SUPPORTED BY UNITY SELF15
6.	NETWORK INSTALLATION
6.1	Network design and installation17
6.2	Configuration and installation18
7	A CKNOWLED CEMENT AND A CCEDTANCE



e-mail: <b>su</b>	pport@tec	hnogym.com
-------------------	-----------	------------



# CAREFULLY READ THE INFORMATION CONTAINED IN THIS DOCUMENT.



DANGEROUS VOLTAGE LEVELS EVEN WHEN THE EQUIPMENT IS OFF



*NOTE:* The information contained in this document may be changed without prior notification.

Technogym does not issue guarantees of any kind regarding this material. Technogym will not be held responsible for any errors contained herein or for any accidental damage or damage consequent to the supply, services or use of this material.

This document contains proprietary information that is covered by copyright. All rights reserved.

No part of this document may be photocopied, reproduced or translated into another language without the prior written consent of Technogym.

Technogym® is a trademark owned by Technogym S.p.A.



Blank Page



#### 1. GENERAL WARNINGS

#### 1.1 INTRODUCTION

This document includes the information necessary for correctly preparing the site for equipment installation.

This manual includes informative notes with specific meanings:



ATTENTION: Regulation that may lead to injury if not complied with.



CAUTION: Regulation that may lead to damage to the equipment if not complied with.



WARNING: Information regarding the operation in progress.



Detail regarding the operation in progress.



Blank page.



# 2. ELECTRIC REQUIREMENTS

## 2.1 POWER SUPPLY

	UNITY SELF 2017		
	EXCITE+ MODEL	ARTIS MODEL	
Power supply	100-240Vac	100-240Vac	
	50/60Hz	50/60Hz	

Table 1

#### 2.2 POWER SUPPLY INPUT AND WALL SOCKET

The power supply input is located at the base of UNITY SELF, in the rear, as shown in the figure.

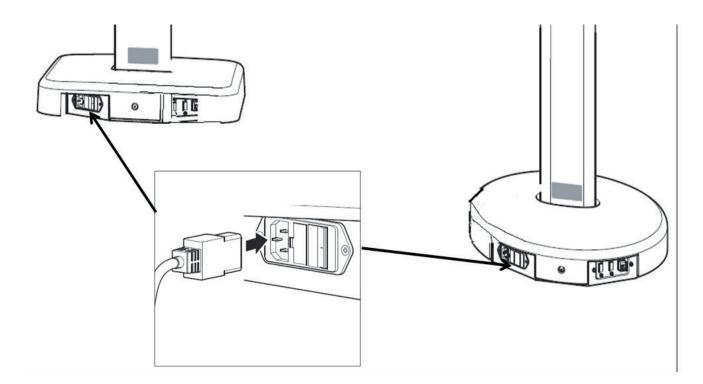


Figure 1



A wall socket with an earth connection is required.





The wall socket must provide power of at least 800 watt and be used exclusively for Unity Self.



## 3. REQUIREMENTS FOR THE DATA NETWORK CONNECTION

## 3.1 NETWORK REQUIREMENTS

#### 3.1.1 WIRED ETHERNET NETWORK

- 5e/6 category Ethernet cables- UTP with patch RJ45,
- *Switch with a number of ports > number of connected equipments.*

#### 3.1.2 WIRELESS NETWORK

- Wireless Access Point or Router or ADSL Gateway;
- Standard: IEEE 802.11a/b/g/n;
- Frequency: 2.4GHz, 5GHz;
- Advanced security: 64 and 128 WEP/ WPA / WPA2.

#### 3.2 WIRELESS GUIDELINES

This information is intended only as a guideline.

For the installation and configuration of the wireless network, contact companies and technicians who are experts in the field.



The distance from the access point must not exceed 25-30 metres (without any walls or obstacles).

#### 3.2.1 MAXIMUM NUMBER OF DEVICES CONNECTED TO AN ACCESS POINT



For more details, refer to the technical specifications for the Access Points (AP).

- 1. **Up to 5 devices**: use a **commercial** access point.
- 2. **More than 5 devices**: use a **professional** Access Point (see the technical datasheet).



#### 3.3 FIREWALL/ROUTER RULES FOR ACCESSING MW CLOUD SERVICES

The locally installed firewall\router must be configured with ports 80 and 443 open (UDP and TCP traffic).

These ports must also be open on the devices of the relative IPS (internet connection supplier).

In order to correctly use the MW Cloud services, free access to the internet must be guaranteed, and in particular, access to the following list of DNS names must never be blocked.

- mywellness.com
- technogym.com
- facebook.com
- facebook.net
- fbcdn.net
- google.com
- googleapis.com
- google-analytics.com
- movergy.com
- worldweatheronline.com
- clouddrive.com
- rackcdn.com
- races-lb-639687283.eu-west-1.elb.amazonaws.com



It is not possible to define the resource domains outside of the cloud (e.g. Facebook, Google, Akamai, worldweatheronline, etc).

## 3.4 PROXY



PROXY NOT MANAGED.

#### 3.5 IP SETTING

Static IP must be set if UNITY SELF is used for classes (e.g. GC2, Skillmill).



# 4. MINIMUM HDMI CONNECTION REQUIREMENTS BETWEEN UNITY SELF AND AN EXTERNAL MONITOR / VIDEO PROJECTOR

#### Basic requirements:

- Use an HDMI cable that is shorter than 10 m. For lengths equal to or greater than 10 m, even if a computer or a set top box is connected there is still a video display problem.
- For distances equal to or greater than 10 m, the following must be used:
- HDMI cables with an incorporated amplifier, or
- HDMI cables with signal regeneration, or
- HDMI extenders that make it possible to arrive to 50 m. The operating diagram is shown below:

# How it works:

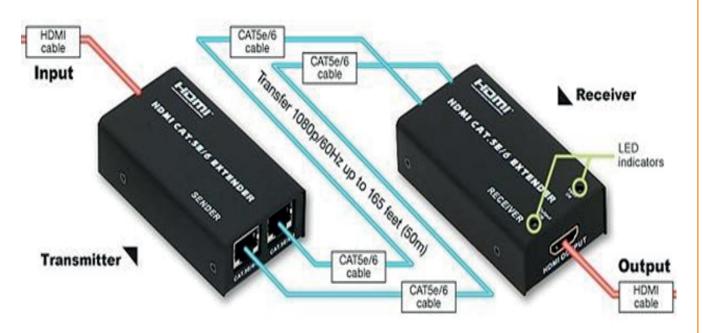


Figure 2



Blank page.



# 5. RESOLUTION SUPPORTED BY UNITY SELF

The UNITY SELF output is automatically set to the resolution of the screen with which it is connected.

Supported resolution: 640x480; 720x480; 720x576; 720p; 1080p.

Recommended resolution: minimum of 720p.

If the external monitor/video projector screen is black, check and modify the resolution set for it.



Blank page.



# 6. NETWORK INSTALLATION

## 6.1 NETWORK DESIGN AND INSTALLATION

During the network design and installation phases, Technogym must be in contact with the technicians of the company performing the work in order to obtain and provide technical information, to make sure that the network is installed and configured according to the required technical characteristics.



#### 6.2 CONFIGURATION AND INSTALLATION

The authorised Technogym technician can perform the installation and relative testing of the devices after the customer provides confirmation to have prepared and installed all the required components and that they are functioning correctly.

For this purpose, Technogym will request the customer to fill in an information form regarding the status of the club (check list) and send it to technical support, which will be sent by Technogym a few days prior to the scheduled installation date.

The information form regarding the status of the club (check list) provides Technogym with the information relative to the installation status of the network for the devices in order to makes sure that everything required for the installation is present and functioning with the installation.



ATTENTION: The customer is responsible for the installation and configuration of the network infrastructure (cables) of the network hardware (switch, router, firewall) and of the Wireless network, if applicable.



ATTENTION: TECHNOGYM warns that the efficiency and proper operation of the system depend on the technical characteristics of the installed hardware.



ATTENTION: TECHNOGYM does not guarantee the operation of the Mywellness Cloud services if all the technical specifications and indicated warnings are not observed.



# 7. ACKNOWLEDGEMENT AND ACCEPTANCE

Date:	 	
Acknowledgement and acceptance:		



Blank Page



# $TECHNOGYM\ S.p.A.$

Via Calcinaro, 2861 - 47521 Cesena (FC) - Operational Headquarters

ITALY

Tel.: +39-0547-650638

Fax: +39-0547-650150

e-mail: support@technogym.com

0SM01058AA-UK