


TAMPER
BT 60, BT 65, BVT 65

PERFORMANCE DATA

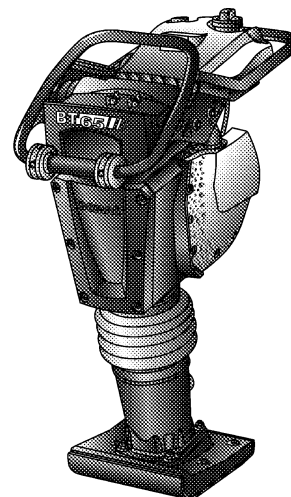

Machine type	Compaction output (m3/h)		
	Gravel, sand	Mixed soil	Silt, clay
BT 60	9-13	7-11	6-9
BT 65	13-17	8-12	7-10
BVT 65	13-17	8-12	7-10

Technical Data

Shipping dimensions in m3


BT 60	0,262
BT 65	0,262
BVT 65	0,262

Standard Equipment

- ☒ Engine Protection System
 - Protective engine covering
 - Two-stage double air filter system (BT)
 - Automatic oil level control
 - Dual fuel filter system
- ☒ Vibration insulated steering bow
- ☒ Self-cleaning air filter housing
- ☒ Protective covering
- ☒ Single point lifting device
- ☒ Recoil starter
- ☒ Carrying handles
- ☒ Plastic castor as loading aid
- ☒ Infinitely variable frequency
- ☒ Combination of engine stop/fuel switch
- ☒ h-/ rpm meter (BT)
- ☒ 3-2-1 Warranty

Optional Equipment

- ☐ Transport device with puncture proof wheels
- ☐ Tamper foot widths (160-330mm)
- ☐ Tamper foot extensions
- ☐ h-/ rpm meter (BVT)
- ☐ Special painting
- ☐ Tool kit
- ☐ Service Kit
- ☐ Operator protection contact breaker switch

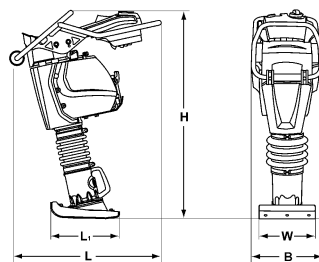

Dimensions in mm

	B	H	L	L1	W
BT 60	350	1030	728	335	230
BT 65	350	1030	728	335	280
BVT 65	350	1030	728	335	280

Technical Data

Weights

Operating weight CECE	kg	58	68	67
Basic weight	kg	57	67	66

Dimensions

Working width (tamper plate)	mm	230	280	280
------------------------------------	----	-----	-----	-----

Driving Characteristics

Working speed max.	m/min	20	20	20
Area coverage max.	m ² /h	276	336	336

Drive

Engine manufacturer	Honda	Honda	Honda
Type	GX 100	GX 100	GX 100
Emission stage	CARB Phase III	CARB Phase III	CARB Phase III
Cooling	air	air	air
Number of cylinders	1	1	1
Performance SAE J 1349kW	2,3	2,3	2,3
Fuel	gasoline	gasoline	gasoline
Drive system	mech.	mech.	mech.
Fuel comsump. aver. during operationl/h	0.9	0.9	0.9

Exciter system

Frequency	Hz	10- 11,8	10- 11,8	10- 11,8
Impact force	kN	15,0	17,0	16,0

Capacities

Fuel	l	3,0	3,0	3,0
------------	---	-----	-----	-----

Technical modifications reserved. Machines may be shown with options.



PRE 541 10 001

170215 Sa02

BOMAG
Hellerwald
D-56154 Boppard
P.O. Box 5162
Tel. (0)6742 - 1000
Fax (0)6742 - 3090

