

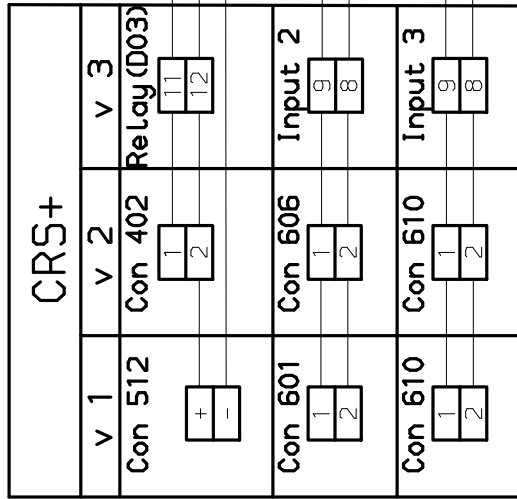


WHEN THE LV 5 SIGNAL IS ACTIVE
THE SYMBOL R SHOULD BE VISIBLE
IN THE TOP LEFT CORNER OF THE DISPLAY

- OUTPUTS:
- MA1 AGITATOR
 - MA2 MILK PUMP
 - EV2 SOLENOID VALVE HOT WATER
 - EV3 SOLENOID VALVE COLD WATER
 - EV4 SOLENOID VALVE OUTLET TANK
 - EV5 SOLENOID VALVE DRAIN TANK
 - EV6 SOLENOID VALVE DRAIN VALVE No 1
 - EV7 SOLENOID VALVE DRAIN VALVE No 2
 - EV8 SOLENOID VALVE CAPACITY REGULATOR
 - CL1 CONTACTOR CLEANING PUMP
 - CL2 CONTACTOR CLEANING PUMP
 - CO1 CONTACTOR COMPRESSOR 1
 - CO2 CONTACTOR COMPRESSOR 2
 - HE CONTACTOR HEATER
 - DET D05 PUMP DETERGENT
 - AC1 D05 PUMP DESINFECTON
 - AL1 ALARM
 - LV7 "CLEANING/CLEANING" SIGNAL TO ROBOT
 - LV7 "CLEANING ON" SIGNAL TO ROBOT
 - LA1 LIGHT COOLING ON
 - LA2 TANKGUARD RED LIGHT
 - LA3 TANK GUARD GREEN LIGHT
- INPUTS:
- MA+1 FEEDBACK AGITATOR
 - MA+2 FEEDBACK MILK PUMP
 - CO1+1 FEEDBACK CONTACTOR COMPRESSOR 1
 - CO2+1 FEEDBACK CONTACTOR COMPRESSOR 2
 - CL1+1 FEEDBACK CONTACTOR CLEANING PUMP
 - SK START/STOP
 - LD1 LEVEL INDICATOR WASHING
 - LD2 CONDUCTIVE SENSOR DETERGENT
 - LV4 POSITION OUTLET VALVE
 - LV5 POSITION FILLING VALVE ROBOT
 - TS SENSOR TEMPERATURE TANK
 - PL5 LEVEL SENSOR TANK
 - C5 CONDUCTIVE SENSOR CLEANING

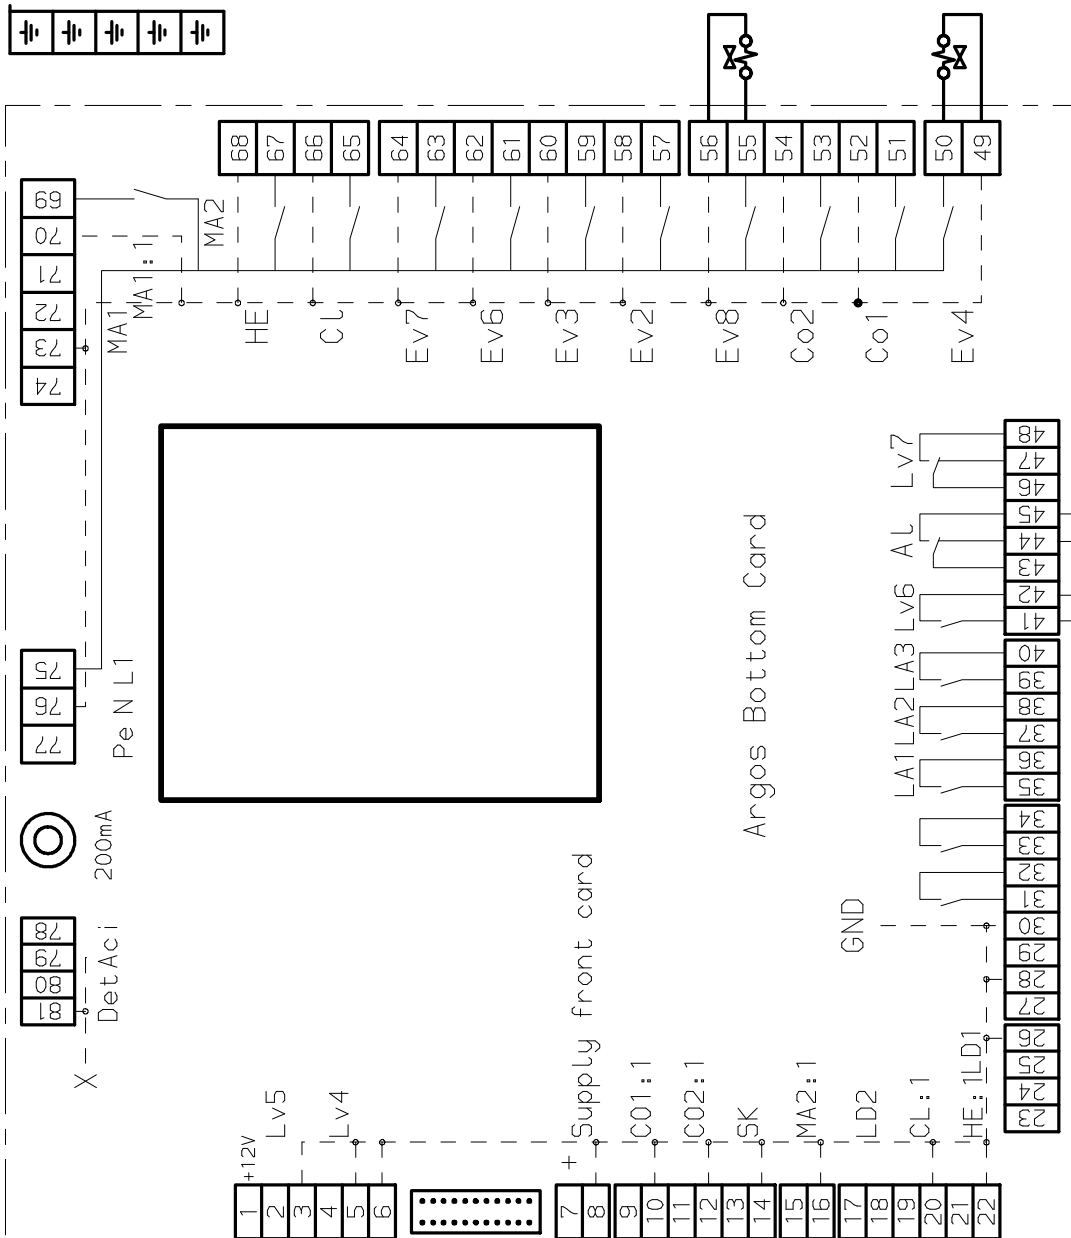

Ladder diagram

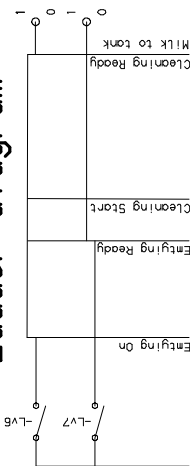

ON ARGOS/NAUTILUS 2 UNITS WITH
PROGRAM VERSION EARLIER THEN
1.1.06 THE BRIDGE MUST BE MADE
BETWEEN 41-46 AND 42-48

Ri.ted: B05 Datum: 19-09-11 Readt.: HL Stand. gr.: Skala:
 Order nr.:
 Serienr.:
 Ersätter:

Argos/Nautilus 2 - CRS+
Argos/Nautilus 2 - CRS+
Anslutning CRS+/Connection CRS+

Ref.nr.: **B** Utgåva: **322045**
 Ri.tn.nr.:

Wedholms
 Tekniska AB